




Sony VAIO VPCF 132FX Power Button Replacement

This will guide you in replacing the Power Button of a Sony VAIO VPCF 132FX.

Written By: trickster

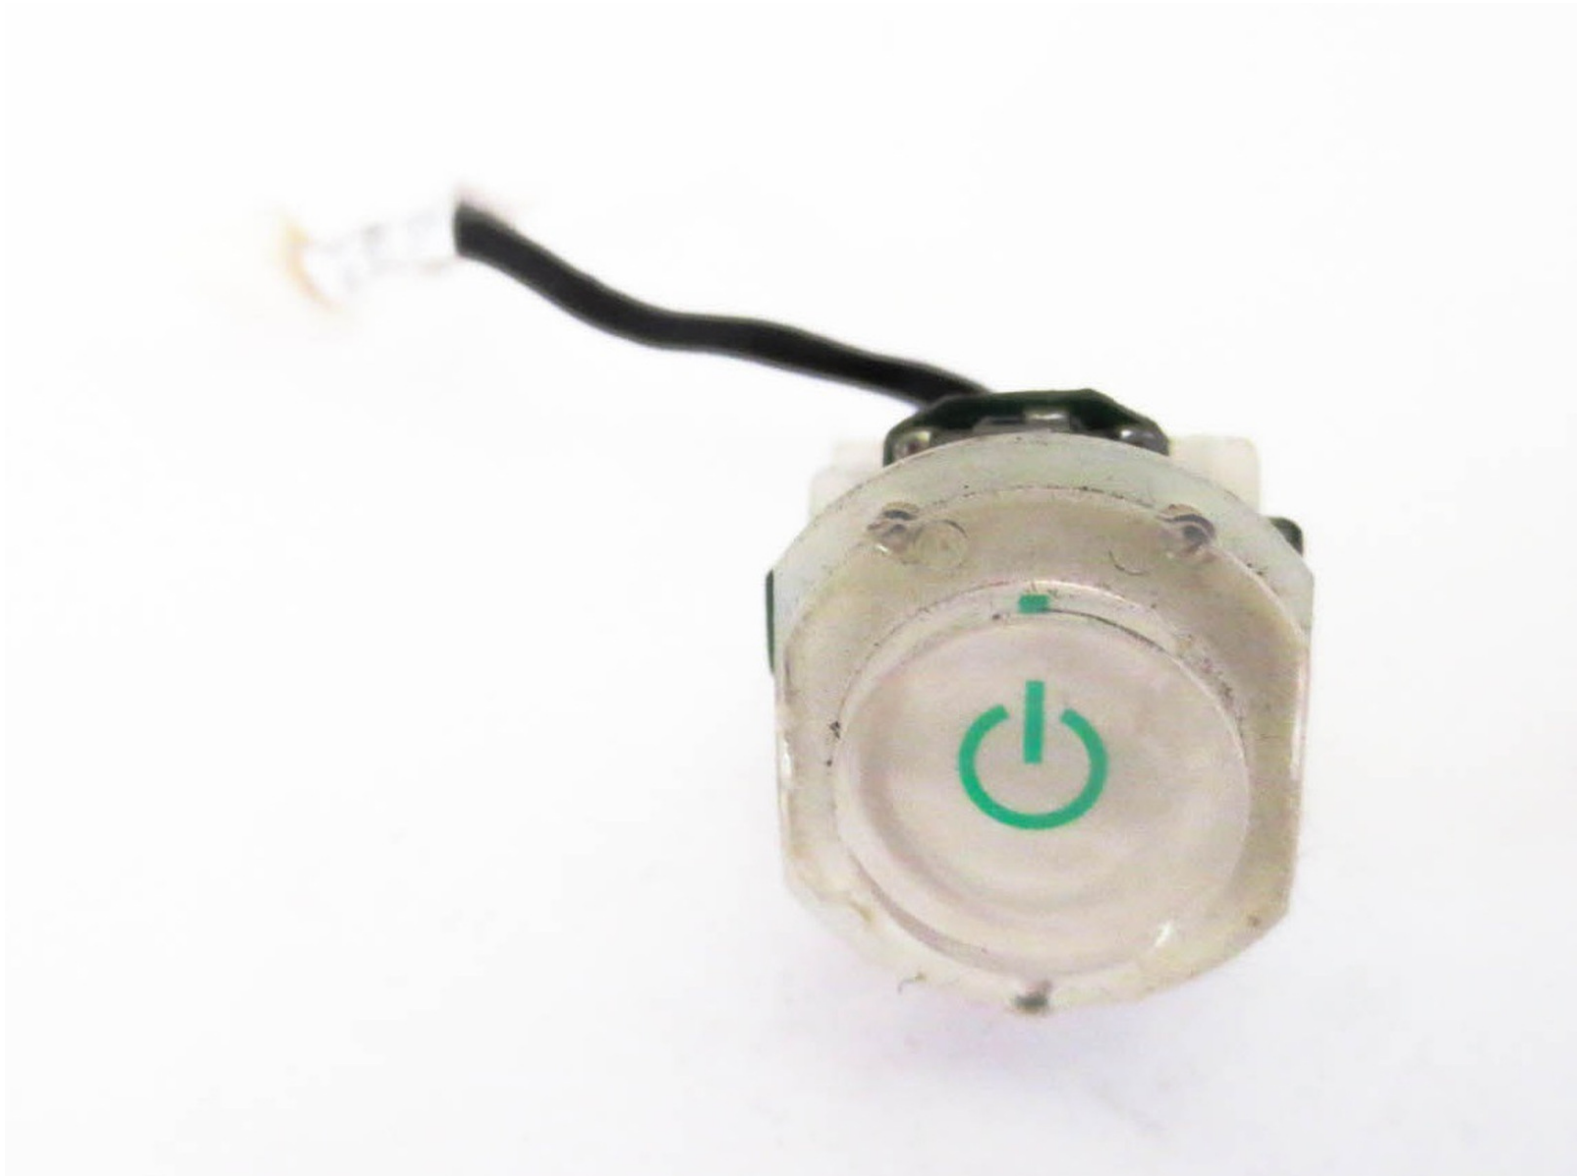

INTRODUCTION

This will guide you in replacing the Power Button of a Sony VAIO VPCF 132FX.

Step 1 — Battery



- Remove all wires then flip the laptop

Step 2



- Remove the battery

Step 3 — Media Board




- Remove the screws and flip it back.

Step 4





- Lift the screen and slide your nail or any flat plastic to the side of the cover to unclip it.
- Slide from the sides towards the center.

Step 5

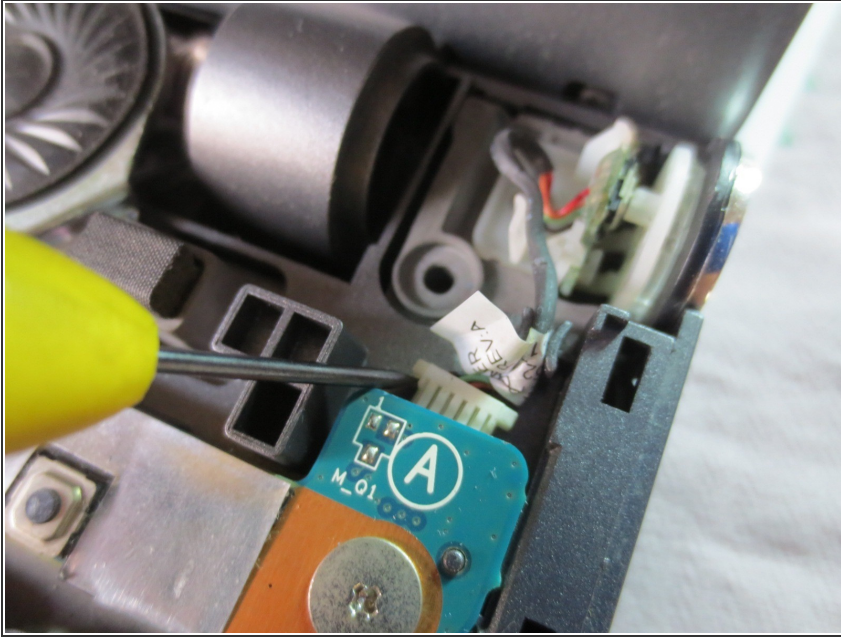


- Gently remove the wire of the Power Button.

Step 6

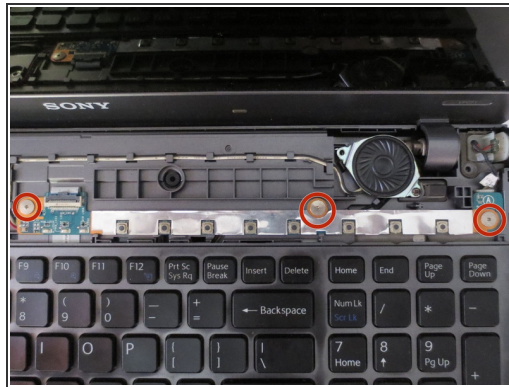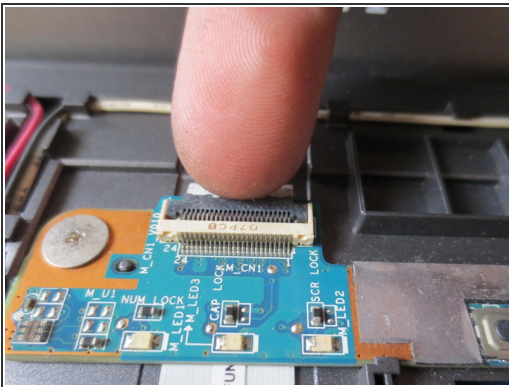


- Unlock the Lock.
 - Unscrew the 3 Flat screws and remove the Media Board.
- ☒ You may skip this step if replacing the Power Button.

Step 7 — Power Button

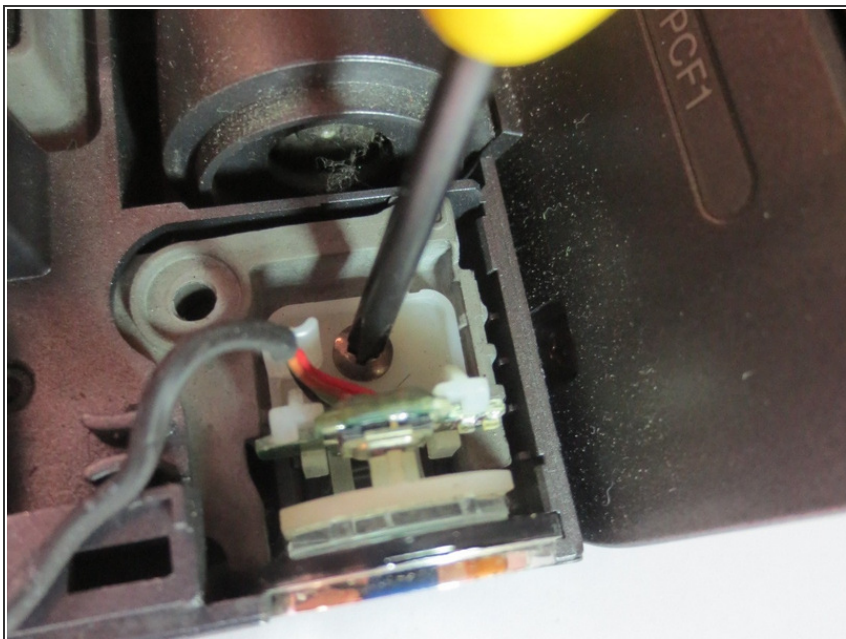

- Unscrew the Power button.

Step 8

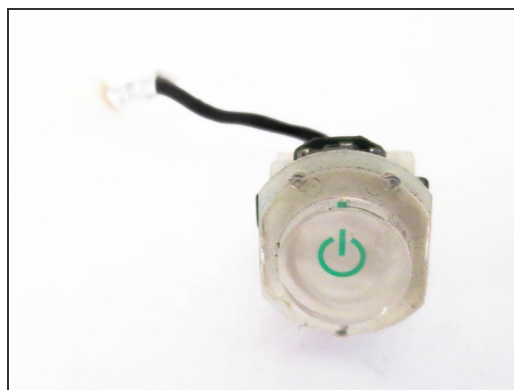

- While pulling the button upwards and towards the left (left fingers), push the button inwards (right fingers) at the same time to remove it from its place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:51:59 PM.